



- ⓘ** Pixl.js has no 5v rail so this is not connected by default.  
To connect voltage to the VOUT pin, use a solder jumper to connect it to VIN or 3V3.
- ⓘ** Interface on all GPIO pins: 1×SPI, 1×UART, 1×I<sup>2</sup>C  
When power is first applied, the MDBT42Q checks if pin D8 is at 3.3V.  
If it is, it initialises the on-chip UART on D0 (RX) and D1 (TX) and puts the Espruino console on it at 9600 baud.