

## Datasheet

### Goodix GT911

The information contained in this document has been carefully researched and is, to the best of our knowledge, accurate. However, we assume no liability for any product failures or damages, immediate or consequential, resulting from the use of the information provided herein. Our products are not intended for use in systems in which failures of product could result in personal injury. All trademarks mentioned herein are property of their respective owners. All specifications are subject to change without notice.





# **GT911**

### 5-Point Capacitive Touch Controller for Small-Sized MID

Rev.09—March 11, 2015

#### ===== Disclaimer ======

The information concerning the device in this publication is intended for you only and is subject to change without prior notice. It is your responsibility to ensure its application complies with technical specifications. Shenzhen Huiding Technology Co., Ltd. (hereafter referred to as "GOODIX") makes no representation or guarantee for this information, either expressed or implied, written or verbal, statutory or otherwise including but not limited to representation or guarantee for its application, quality, performance, merchantability or fitness for a particular purpose. GOODIX shall assume no responsibility for this information and relevant consequences arising out of the use of such information. Without written consent of GOODIX, it is prohibited to use GOODIX products as critical components in any life support system. This document conveys no licenses, implicitly or otherwise, to any intellectual property rights belonging to GOODIX or any other entities.





### Contents

1.	Overview	4
2.	Features	4
3.	Block Diagram	5
4.	Pin Configurations	6
5.	Sensor Design	7
5.1	Layout of Rx Channels	7
5.2	2 Layout of Tx Channels	7
5.3	3 Sensor Design Specifications	7
5.4	Touch Key Design	
6.	I <sup>2</sup> C Communication	9
	6.1 I <sup>2</sup> C Timing	
	a) Data Transmission	11
	b) Writing Data to GT911	11
	c) Reading Data from GT911	12
7.	HotKnot Mode	13
7.1	I Start HotKnot	13
7.2	2 Data Transmission between TPs	13
7.3	B Host Receives Data from GT911	13
8.	Description on Functions	14
	8.1 Operating Modes	14
	a) Normal Mode	14
	b) Green Mode	15
	c) Gesture Mode	15



### GT911: 5-Point Capacitive Touch Controller for Small-Sized MID



	c	i) Sleep Mode	15
	e	e) Approach Mode	15
	f	) Receive Mode	.16
	g	) Send Mode	16
	8.2	Interrupt Triggering Mechanism	.16
	8.3	Sleep Mode	17
	8.4	Stationary Configuration	17
	8.5	Adaptive Frequency Hopping	17
	8.6	Self-calibration	17
	a	) Self-calibration during Initialization	17
	b	) Automatic Drift Compensation	17
9.	Samp	le Schematic	18
10.	E	Electrical Characteristics	19
	10.1	Absolute Maximum Ratings	19
	10.2	Recommended Operating Conditions	19
	10.3	AC Electrical Characteristics	.19
	10.4	DC Electrical Characteristics	20
11.	F	Package	21
12.	F	Revision History	22
13.	C	Contact Information	23





### 1. Overview

GT911, a new-generation 5-point capacitive touch solution designed for 7" to 8" MID, consists of up to 26 Transmitter electrodes and 14 Receiver electrodes to provide higher touch accuracy.

GT911 supports up to 5 concurrent touches with real-time tracking of accurate position and motion trajectory as well as touch area. Furthermore, it is able to report such information to the host as required.

### 2.Features

- ♦ Built-in capacitive sensing circuit and high-performance MPU
  - > Report rate: 100Hz
  - > Outputs touch coordinates in real time
  - > Unified software applicable to capacitive touch screens of various sizes
  - Single power supply, internal 1.8V LDO
  - > Flash embedded; In-system reprogrammable
  - HotKnot integrated
- ♦ Capacitive touch sensor
  - Channels: 26 (Tx channels)\*14 (Rx channels)
  - > Supports capacitive touch screen sizes: 7" to 8"
  - Supports touch key design on FPC
  - Supports ITO glass and ITO Film
  - > Cover Lens thickness supported: 0.55mm  $\leq$  Glass  $\leq$  2mm,

 $0.5mm \leq PMMA \leq 1.2mm$ ,


- (For detail, please refer to Sensor Design Guidelines)
- Adaptive frequency hopping
- Supports OGS full lamination
- ♦ HotKnot
  - Transmission rate: 7.0Kbps(max)
  - > Data frame maximum capacity: 128 bytes
  - > Applicable sensor types: OGS/traditional GFF/GG/GF
- ♦ Environmental adaptability
  - Self-calibration during initialization
  - > Automatic drift compensation
  - > Operating temperature: -40  $^{\circ}$ C to +85  $^{\circ}$ C; humidity:  $\leq$  95%RH
  - > Storage temperature: -60  $^{\circ}$ C to +125  $^{\circ}$ C; humidity:  $\leq$  95%RH





- ♦ Host interface
  - Standard I<sup>2</sup>C interface
  - > Works in slave mode
  - ➤ Supports 1.8V to 3.3V host interface voltage
- ♦ Response time
  - Green mode: <48ms</p>
  - Sleep mode: <200ms</p>
  - Initialization: <200ms</p>
- ♦ Power supply voltage:
  - ➤ Single supply: 2.8V to 3.3V
- ♦ Power supply ripple:
  - ≻ Vpp≦50mV
- ♦ Package: 52 pins, 6mm\*6mm\*0.8mm, QFN 0.4mm Pitch
- ♦ Tools provided to support application development:
  - > Touch panel module parameter detector and auto-generator
  - > Touch panel module performance test tool
  - MP Test Tool
  - > Reference driver code and documentary guide for host software development


### 3. Block Diagram

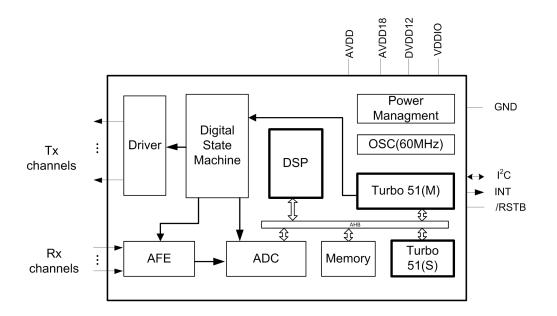





### 4. Pin Configurations

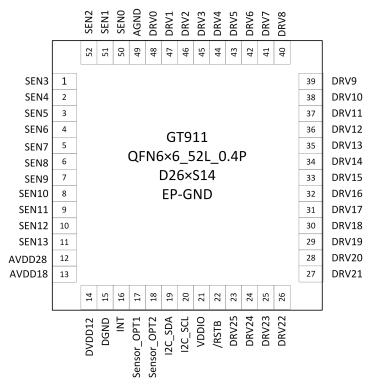

Pin No.	Name	Function description	Remarks
1~11	SEN3 to SEN13	Receiver electrodes	Output drive signal while HotKnot function is on
12	AVDD28	Analog power	2.2uF filter capacitor to GND
13	AVDD18		2.2uF filter capacitor to GND
14	DVDD12		2.2uF filter capacitor to GND
15	DGND	Digital signal ground	
16	INT	Interrupt signal	
17	Sensor_OPT1	Module ID pin	
18	Sensor_OPT2	Module ID pin	External pull-down resistor required
19	I2C_SDA	I <sup>2</sup> C data signal	
20	I2C_SCL	I <sup>2</sup> C clock signal	
21	VDDIO	Supply voltage of GPIO	2.2uF filter capacitor to GND Floating: 1.8V Connect to AVDD: AVDD
22	/RSTB	Reset pin	External 10K pull-up resistor required, active-low reset
23~48	DRV25 to DRV0	Transmitter electrodes	
49	AGND	Analog signal ground	
50~52	SEN0 to SEN2	Receiver electrodes	Output drive signal while HotKnot function is on






### **5.Sensor Design**

### 5.1 Layout of Rx Channels

SENS0 to SENS13 are 14 Rx channels on the chip directly connected to 14 ITO Rx channels on the sensor either in sequence or reverse sequence. Please refer to the tool *GT9 Series Channel Selector* for channel selection when there are less ITO Rx channels on the sensor than Rx channels on the chip.

Sample Layout: the ITO Rx channels on the sensor are connected to the Rx channels on the chip in sequence from SENS0 to SENS13:

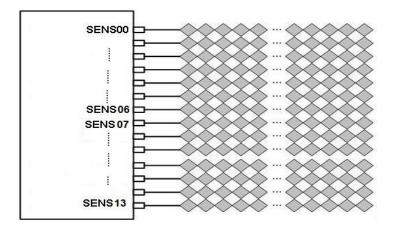

### 5.2 Layout of Tx Channels

DRV0 to DRV25 are 26 Tx channels on the chip directly connected to 26 ITO Tx channels on the sensor. Please refer to the tool *GT9 Series Channel Selector* for channel selection and assignment.

After the layout of the Tx channels is determined, relevant registers of GT911 shall be configured to ensure logic positions of Tx channels are consistent with their physical positions, so that the reported coordinates match the physical coordinates.

For details of sensor design, please refer to layout guidelines.

### 5.3 Sensor Design Specifications

	DITO Limit	SITO Limit
Tx Trace Impedance	≦3KΩ	≦3KΩ
Tx Channel Impedance	≦10KΩ	≦10KΩ
Rx Trace Impedance	≦10KΩ	≦10KΩ
Rx Channel Impedance	≦40KΩ	≦10KΩ
Node capacitance	≦4pF	≦4pF





Note:

- 1) For detailed sensor design specifications, please refer to *Sensor Design Guidelines* of Goodix.
- 2) When metal traces are employed for routing, some traces may be oxidized due to process control or other reasons and their impedance will become larger, making the impedance vary between traces. When ITO are employed for routing, though we've done our utmost to obtain impedance consistency by using matched length and width in design, there are still differences. To ensure data consistency and uniformity on the entire screen, it is necessary to ensure the sensor design complies with the above requirements.
- 3) In addition, when Tx trace and Rx trace are adjacent and parallel to each other, separate the traces with a ground trace. For ground trace width, please refer to *Sensor Design Guidelines*. Note that ground trace width should not be less than 0.2mm.

#### 5.4 Touch Key Design

GT911 supports at most 4 separated touch keys in the following two ways:

- Rx channel extension: Take one Tx channel as a common port for the touch keys and connect the Tx channel to four Rx channels to enable four touch keys. The touch keys must not share their Tx channel with the touch screen. However, Rx channels have to be shared.
- 2) Touch key design on FPC: Connect one separate Tx channel to four Rx channels to enable four touch keys. The touch keys have to share their Rx channels with the touch screen.

Touch key pattern on FPC should be designed independently.






### 6.I<sup>2</sup>C Communication

#### 6.1 I<sup>2</sup>C Timing

GT911 provides a standard I<sup>2</sup>C interface for SCL and SDA to communicate with the host. GT911 always serves as slave device in the system with all communication being initialized by the host. It is strongly recommended that transmission rate be kept at or below 400Kbps. The I<sup>2</sup>C timing is shown below:

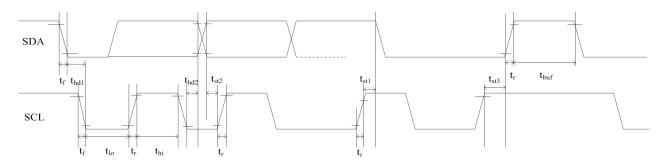

#### Test condition 1: 1.8V host interface voltage, 400Kbps transmission rate, 2K pull-up resistor

Parameter	Symbol	Min.	Max.	Unit
SCL low period	t <sub>lo</sub>	1.3	-	us
SCL high period	t <sub>hi</sub>	0.6	-	us
SCL setup time for Start condition	t <sub>st1</sub>	0.6	-	us
SCL setup time for Stop condition	t <sub>st3</sub>	0.6	-	us
SCL hold time for Start condition	t <sub>hd1</sub>	0.6	-	us
SDA setup time	t <sub>st2</sub>	0.1	-	us
SDA hold time	t <sub>hd2</sub>	0	-	us

Test condition 2: 3.3V host interface voltage, 400Kbps transmission rate, 2K pull-up resistor


Parameter	Symbol	Min.	Max.	Unit
SCL low period	t <sub>lo</sub>	1.3	-	us
SCL high period	t <sub>hi</sub>	0.6	-	us
SCL setup time for Start condition	t <sub>st1</sub>	0.6	-	us
SCL setup time for Stop condition	t <sub>st3</sub>	0.6	-	us
SCL hold time for Start condition	t <sub>hd1</sub>	0.6	-	us
SDA setup time	t <sub>st2</sub>	0.1	-	us
SDA hold time	t <sub>hd2</sub>	0	-	us

GT911 supports two I<sup>2</sup>C slave addresses: 0xBA/0xBB and 0x28/0x29. The host can select the address by changing the status of Reset and INT pins during the power-on initialization phase. See the diagram below for configuration methods and timings:







#### **Power-on Timing:**

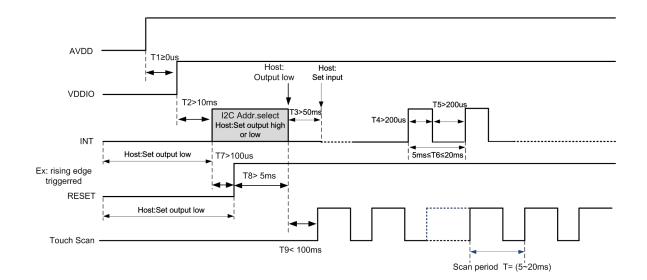

#### Timing for host resetting GT911:

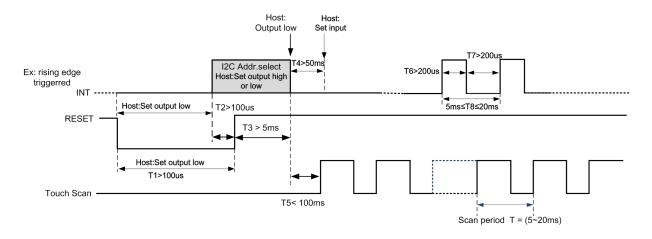

#### Timing for setting slave address to 0x28/0x29:

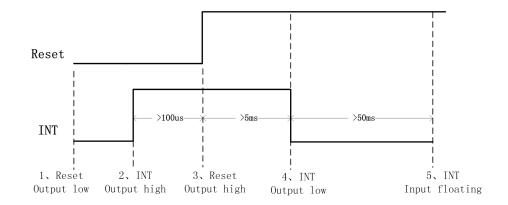


#### Timing for setting slave address to 0xBA/0xBB:



GOODIX CONFIDENTIAL Reproduction and/or distribution of this document in whole or in part is strictly prohibited without written consent of GOODIX.



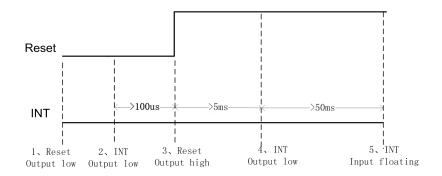

#### a) Data Transmission

(For example: device address is 0xBA/0xBB)

Communication is always initiated by the host. Valid Start condition is signaled by pulling SDA line from "high" to "low" when SCL line is "high". Data flow or address is transmitted after the Start condition.

All slave devices connected to I<sup>2</sup>C bus should detect the 8-bit address issued after Start condition and send the correct ACK. After receiving matching address, GT911 acknowledges by configuring SDA line as output port and pulling SDA line low during the ninth SCL cycle. When receiving unmatched address, namely, not 0XBA or 0XBB, GT911 will stay in an idle state.

For data bytes on SDA, each of 9 serial bits will be sent on nine SCL cycles. Each data byte consists of 8 valid data bits and one ACK or NACK bit sent by the recipient. The data transmission is valid when SCL line is "high".

When communication is completed, the host will issue the STOP condition. Stop condition implies the transition of SDA line from "low" to "high" when SCL line is "high".

#### b) Writing Data to GT911

```
(For example: device address is 0xBA/0xBB)
```



#### **Timing for Write Operation**

The diagram above displays the timing sequence of the host writing data onto GT911. First, the host issues a Start condition. Then, the host sends 0XBA (address bits and R/W bit; R/W bit as 0 indicates Write operation) to the slave device.

After receiving ACK, the host sends the 16-bit register address (where writing starts) and the 8-bit data bytes (to be written onto the register).

The location of the register address pointer will automatically add 1 after every Write Operation. Therefore, when the host needs to perform Write Operations on a group of registers of continuous addresses, it is able to write continuously. The Write Operation is terminated when the host issues the Stop condition.





#### c) Reading Data from GT911

(For example: device address is 0xBA/0xBB)

s	Address_W	A C K	Register_H	A C K	Register_L	A C K	E	s	Address_R	A C K	Data_1	A C K	•••••	Data_n	N A C K	Е
	Set address pointer								►Rea	ıd da	ata ┥ 👘					

#### Timing for Read Operation

The diagram above is the timing sequence of the host reading data from GT911. First, the host issues a Start condition and sends 0XBA (address bits and R/W bit; R/W bit as 0 indicates Write operation) to the slave device.

After receiving ACK, the host sends the 16-bit register address (where reading starts) to the slave device. Then the host sets register addresses which need to be read.

Also after receiving ACK, the host issues the Start condition once again and sends 0XBB (Read Operation). After receiving ACK, the host starts to read data.

GT911 also supports continuous Read Operation and, by default, reads data continuously. Whenever receiving a byte of data, the host sends an ACK signal indicating successful reception. After receiving the last byte of data, the host sends a NACK signal followed by a STOP condition which terminates communication.





### 7.HotKnot Mode

### 7.1 Start HotKnot

When data needs to be sent, the host sends command 0x21 to GT9, enabling GT911 to enter " Approach mode" and work as a transmitting terminal. GT911 will then be able to detect the receiving terminal communicating with it. When GT911 succeeds in detecting the receiving terminal, it will notify the the host to shut off LCD using an interrupt signal and then transmit data to the receiveing terminal.

### 7.2 Data Transmission between TPs

After GT911 and another Hotknot terminal successfully detect one another, the host downloads HotKnot transmission firmware and sends the firmware to both terminals. While the transmission firmware runs, the two terminals are ready for data transmission, entering Receive mode by default. When the GT911 Transmit Buffer is refreshed correctly, GT911 works as the transmitting terminal and immediately transmits data to the other HotKnot terminal, which works as a receiving terminal detecting data sent by GT911.

### 7.3 Host Receives Data from GT911

Following recieval or transmission of a data frame, GT911 inverts INT to notify the host to process data.

After receiving a data frame, the host reads the value of the HotKnot-featured status register. If the value of the receive-status register indicates a successful reception, the host will read the data from the Receive Buffer via I<sup>2</sup>C. After reading the recieved data, the host writes 0xAA to the designated address and notifies GT911 that data reading is complete.


After GT911 transmits a data frame, the host reads the value of the HotKnot-featured status register. If the value of the transmit-status register indicates a successful transmission, the host will read the data from the Transmit Buffer via I<sup>2</sup>C. After reading this data, the host writes 0xAA to the designated address and notifies GT911 that data reading is complete. GT911 will automatically switch to Receive mode and will not start transmitting until Transmit Buffer is refreshed again.





### **8.Description on Functions**

#### 8.1 Operating Modes

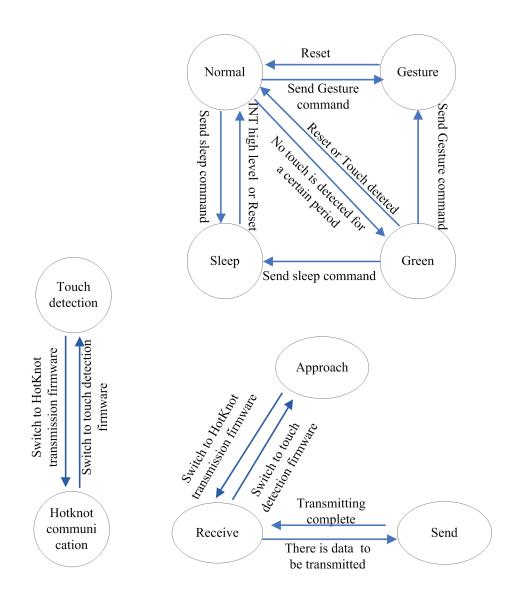

#### a) Normal Mode

When GT911 is operating in Normal mode, its minimum coordinate refresh cycle is 7ms-10ms (subject to configuration; one step is 1ms).

When no touch occurs for a certain period (0s to 15s, subject to configuration; one step is 1s) in Normal mode, GT911 will automatically switch to Green mode to reduce power consumption.





#### b) Green Mode

In Green mode, the scanning cycle for GT911 is about 40ms. It automatically enters Normal mode if any touch is detected.

#### c) Gesture Mode

After the host enables GT911 to enter Gesture mode by sending I2C command 8 to 0x8046 and then to 0x8040, wake-up can be achieved by swipe, double-tap, or writing of specified letters on TP.


In Gesture mode, when GT911 detects any finger swipe on TP for a sufficiently long distance, INT will output a pulse for longer than 250us or a high level causing the host to wake up and turn on the screen.

In Gesture mode, when GT911 detects any double-tap on TP, INT will output a pulse for longer than 250us or a high level causing the host to wake up and turn on the screen.

In Gesture mode, when GT911 detects any writing of specified letters on the TP, INT will output a pulse for longer than 250us or a high level causing the host to wake up and turn on the screen.

#### d) Sleep Mode

GT911 enters Sleep mode if it receives corresponding I<sup>2</sup>C command from the host (requires INT output low before the command). GT911 exits Sleep mode and enters Normal mode when host outputs a high level to INT pin for 2ms to 5ms. The interval between sending screen-off command and wake-up should be longer than 58ms.

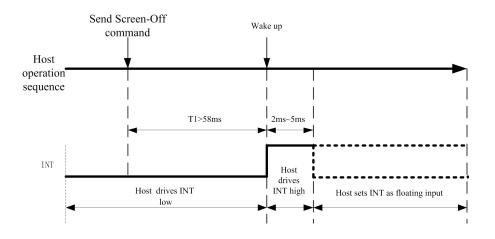

#### e) Approach Mode

When HotKnot proximity detection is enabled, GT911 operates in Approach mode by default. If GT911 exits Approach mode, the host can enable it to enter Approach mode again by sending command 0x20 or 0x21. In Approach mode, touch detection and near-field proximity detection alternate.





If the host sends 0x21 to GT911, GT911 will work as a transmitting terminal and transmit signals with a specified pattern and frequency via Tx and Rx channels. Then, GT911 detects whether there are feedback signals with the same specified pattern and frequency from the receiving terminal. This helps to determine whether any receiving terminal exists. If the host sends 0x20 to GT9, GT911 will work as a Receiving terminal and detect signals with a specified pattern and frequency from the transmitting terminal. If such a signal is detected, GT911 responds using signals with the specified pattern and frequency to the transmitting terminal.

In Approach mode, when detecting any HotKnot-compatible terminal within the near-field range, GT911 will notify the host via INT to capture status. To ensure reliable detection between the transmitting terminal and the receiving terminal, it is required to keep detecting for a minimum of 150ms after the two terminals have detected each other. Then the host downloads and sends HotKnot transmission firmware to enable GT911 to enter Receive mode.

#### f) Receive Mode

In Approach mode, after notified that GT911 has successfully detected another HotKnot terminal, the host downloads and sends HotKnot transmission firmware to enable GT911 to enter Receive mode. In Receive mode, GT911 continues to detect frame start signal, once the signal is detected, GT911 begins to detect and receive data. When the receiving process is completed, GT911 verifies the data. If GT911 finds erroneous data, the receiving process begins again. If the data is found to be correct, GT911 notifies the host via INT to read data in the Receive Buffer.

#### g) Send Mode

When GT911 works in Receive mode, the host sends outgoing data to the Transmit Buffer. When detecting that the Transmit Buffer is refreshed and there is data to be sent, GT911 automatically switches from Receive mode to Send mode. In Send mode, GT911 sends a frame start signal. If it detects ACK fed back from the receiving terminal, it continues to send the data signal. After sending a data chunk, GT911 begins to detect ACK. If it does not detect any ACK or if it detects an erroneous ACK, GT911 will resend the data chunk. If this resending fails over 5 times, it will resend the current data frame another time to the receiving terminal until the host enables GT911 to exit Send mode due to timeout. If GT911 detects ACK and sends the data successfully, it will automatically switch to Receive mode after the host completes the data processing or due to timeout.

#### 8.2 Interrupt Triggering Mechanism

When touched, GT911 sends a pulse via INT pin in every scanning cycle to notify the host to read coordinates. Host will then set a triggering mechanism via relevant register "INT" bit. INT as "0" indicates rising edge-triggered, which means GT911 will notify the host by driving INT output from low to high when operated by user; INT as "1" indicates falling edge-triggered, which means GT911 will notify the host by user grant of the host by user grant of the host by user.





#### 8.3 Sleep Mode

When the touch screen is off or there are no running operations on the TP, the host sends I<sup>2</sup>C command to enable GT911 to enter Sleep mode, which reduces power consumption. When GT911 needs to operate, the host outputs a high level to INT pin for a certain period to awake it. For detailed timings of host enabling GT911 to enter and exit Sleep mode, please refer to section 8.1.

#### 8.4 Stationary Configuration

GT911 supports Stationary Configuration. After receiving configuration parameters from the host, GT911 will fix parameters to the latest version. Once these parameters are fixed, GT911 will communicate with the host solely via I2C bus and will not receive any parameters of previous versions from the host.

#### 8.5 Adaptive Frequency Hopping

GT911 is equipped with reliable anti-interference hardware. When the drive spectrum of GT911 overlaps with the peak spectrum of noise signal, GT911 will switch to another frequency using a self-adaptive frequency hopping mechanism to avoid interference.

#### 8.6 Self-calibration

#### a) Self-calibration during Initialization


Fluctuations in temperature, humidity and environment may affect the reference capacitance of the capacitive sensor in idle state. GT911 will update detection reference capacitance according to environmental conditions within the first 200ms of initialization. Then, GT911 will complete the initialization of the TP test.

#### b) Automatic Drift Compensation

Gradual changes in environmental factors such as temperature, humidity, or dust may also affect the reference capacitance of the capacitive sensor in idle state. GT911 will detect real-time changes in data and perform statistic analysis of historic data to revise reference capacitance and thus reduce the impact that environmental changes have on the TP test.





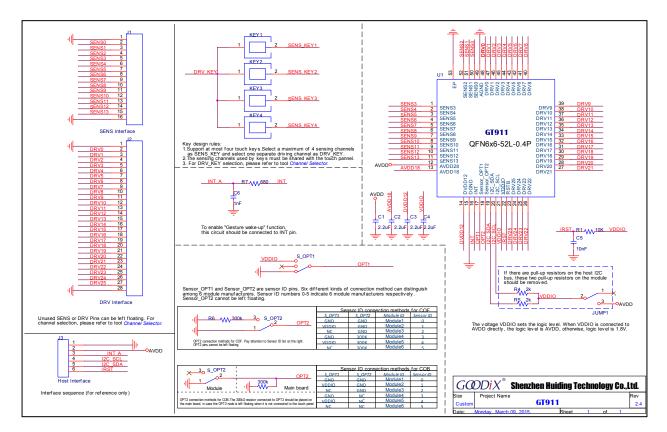

### 9. Sample Schematic

GT911 Sample schematic

#### Note:

- This schematic only represents basic application. Adjustments may be required to fit in with actual situations and application environments.
- It is recommended that the capacitor be ceramic X7R.





### **10. Electrical Characteristics**

#### **10.1 Absolute Maximum Ratings**

(Ambient temperature: 25°C)

Parameter	Min.	Max.	Unit
Analog power AVDD28 (please refer to AGND)	2.66	3.47	V
VDDIO (please refer to DGND)	1.7	3.47	V
Voltage acceptable to digital I/O	-0.3	3.47	V
Voltage acceptable to analog I/O	-0.3	3.47	V
Range of operating temperature	-40	85	°C
Range of storage temperature	-60	125	°C
Welding temperature (10s)	_	300	°C
ESD protection voltage (HB Model)	_	±2	KV

#### **10.2 Recommended Operating Conditions**

Parameter	Min.	Тур.	Max.	Unit
AVDD28	2.8	-	3.3	V
VDDIO	1.8	-	3.3	V
Working temperature	-20	25	85	°C

#### **10.3 AC Electrical Characteristics**

(Ambient temperature:25°C, AVDD=2.8V, VDDIO=1.8V)

Parameter	Min.	Тур.	Max.	Unit
OSC oscillation frequency	59	60	61	MHz
I/O output rise time, low to high	-	14	-	ns
I/O output fall time, high to low	-	14	-	ns



#### **10.4 DC Electrical Characteristics**


Parameter	Min.	Тур.	Max.	Unit
Normal mode operating current	-	8	14.5	mA
Green mode operating current	-	3.3	-	mA
Sleep mode operating current	70	-	120	uA
Doze mode operating current	-	0.78	-	mA
Digital Input low voltage/VIL	-0.3	-	0.25*VDDIO	V
Digital Input high voltage/VIH	0.75*VDDIO	-	VDDIO+0.3	V
Digital Output low voltage/VOL	-	-	0.15*VDDIO	V
Digital Output high voltage/VOH	0.85*VDDIO	-	-	V

(Ambient temperature:25°C, AVDD=2.8V, VDDIO=1.8V or VDDIO=AVDD)






### 11. Package

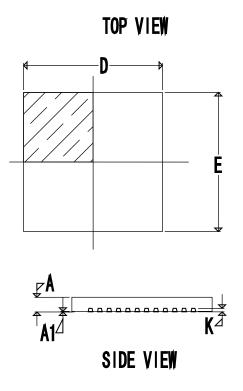

BOTTOM VIEW

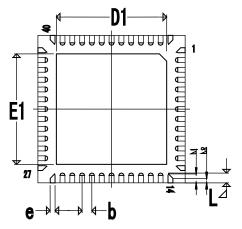

QFN 6 X 6 52PIN 0.4 PITCH SQUARE

Symbol	Dimensions In Millimeters						
Symbol	Min.	Normal	Max.				
A	0.70	0.75	0.80				
A1	0.00	0.035	0.05				
b		0.40BSC					
D	6.00BSC						
D1	4.40	4.50	4.60				
E		6.00BSC					
E1	4.40	4.50	4.60				
е	0.15	0.20	0.25				
L	0.30	0.40	0.50				
L1	0.31	0.36	0.41				
L2	0.13	0.18	0.23				
K		0.203BSC					





### 12. Revision History

Revision	Date	Description
Rev. 00	2012-11-02	Preliminary version
Rev. 01	2012-11-22	Modified configurations
		Updated sample schematic
Rev. 02	2012-12-26	Modified storage temperature, supply currents in
		various modes and some descriptions
Rev.03	2013-03-19	Added descriptions on filter
Rev.04	2013-05-14	Added reflow conditions
Rev.05	2013-06-19	Updated product features
		Added sensor design specifications of SITO
		Updated register map
		Modified operating modes switch diagram
		Modified description on sleep mode and wakeup timing
		Deleted reflow conditions
		Updated sample schematic
		Modified the typ. value of Normal mode operating
		current
Rev.06	2013-08-27	Added layout of Rx channels
		Updated I2C timing
		Updated power-on timing
		Updated register map
		Updated absolute maximum ratings
Rev.07	2014-07-09	Modified product features
		Modified pin definition
		Added touch key design specifications
		Updated power-on timing
		Added reset timing
		Updated I2C addressing timing
		Deleted register map
		Modified operating modes diagram
		Modified sample schematic
		Updated DC electrical characteristics
Rev.08	2014-08-22	Updated power-on and reset timings
Rev.09	2015-03-11	Modified I2C addressing timing
		Modified sample schematic
		Updated AC electrical characteristics
		Modified the Unit of DC electrical characteristics
		Modified package parameters





### **13. Contact Information**



### Shenzhen Huiding Technology Co., Ltd.

Floor 13, Phase B, Tengfei Industrial Building, Futian Free Trade Zone

Shenzhen 518000

TEL: +86-755-33338828

FAX: +86-755-33338828

www.goodix.com



Our company network supports you worldwide with offices in Germany, Great Britain, Italy, Turkey and the USA. For more information please contact:



### DATA DISPLAY GROUP

#### **Distec GmbH**

Augsburger Str. 2b 82110 Germering Germany

Phone:	+49 (0)89 / 89 43 63-0
Fax:	+49 (0)89 / 89 43 63-131
E-Mail:	info@datadisplay-group.de
Internet:	www.datadisplay-group.de

#### **Display Technology Ltd.**

5 The Oaks Business Village Revenge Road, Lordswood Chatham, Kent, ME5 8LF United Kingdom Phone: +44 (0)1634 / 67 27 55 Fax: +44 (0)1634 / 67 27 54 E-Mail: info@datadisplay-group.co.uk Internet: www.datadisplay-group.co.uk

#### Apollo Display Technologies, Corp.

87 Raynor Avenue, Unit 1Ronkonkoma, NY 11779 United States of America Phone: +1 631 / 580-43 60 Fax: +1 631 / 580-43 70 E-Mail: info@datadisplay-group.com Internet: www.datadisplay-group.com

#### **Sales Partner:**

#### **REM Italy s.a.s.**

di Michieletto Flavio & C. Via Obbia Bassa, 10 I-35010 Trebaseleghe (PD) Italy Phone: +39 335 521 37 89 E-Mail: info@remitaly.com Internet:www.remitaly.com

#### Sales Partner:

#### DATA DISPLAY BİLİŞİM TEKNOLOJİLERİ İÇ VE DIŞ TİCARET LİMİTED ŞİRKETİ

Barbaros Mh Ak Zamabak Sk A Blok D:143 Ataşehir/İstanbul Turkey Phone: +90 (0)216 / 688 04 68 Fax: +90 (0)216 / 688 04 69 E-Mail: info@data-display.com.tr Internet:www.data-display.com.tr